


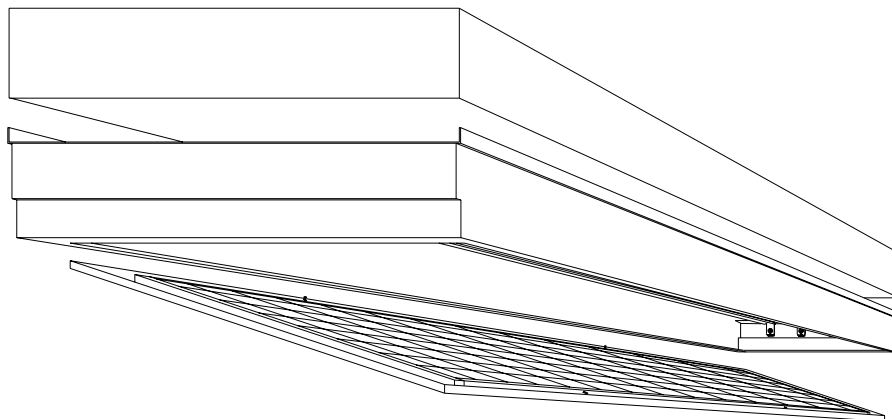

SUGGESTED MOUNTING FOR G6 FLOW-THRU TROFFER

1. Remove louver assembly by loosening four (4) captive screws.
2. Remove ballast cover by turning two (2) quarter-turn fasteners.
3. Place luminaire into grid opening.
4. Make all necessary wiring connections.
5. Install filter to top of luminaire. (By Others)
6. Replace ballast cover, install lamps and louver assembly.



Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the directions of the polish lines.

Note: *All luminaires to be installed by a qualified electrician.
Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.*