




# SUGGESTED RECESSED MOUNTING FOR COMMERCIAL HID LITES

**Series F8-V6, F5-V5, G8-V8**


## FLANGE

1. Remove lens frame assembly by loosening all captive screws.
2. Squeeze the two (2) safety wire hinges or unclip the two (2) safety snells, whichever is being used.
3. Remove the reflector and ballast cover by turning the quarter-turn fasteners.  
*NOTE: On the V7, V5 and V8, instead of quarter-turn fasteners, remove the four (4) wing nuts.*
4. Remove the tape securing the four (4) swing bars to the housing.
5. Place luminaire into ceiling opening and turn the four (4) swing bar screws clockwise until luminaire pulls up securely to the ceiling. *NOTE: If there isn't plenum access it will be necessary to connect wiring before completely installing luminaire.*
6. Make all necessary wiring connections.
7. Replace ballast cover, reflector, install lamp, safety wire hinges or safety snells and lens assembly.

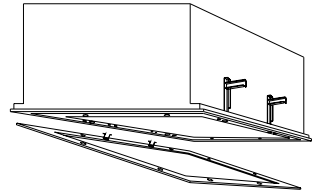


## GRID

1. Remove lens frame assembly by loosening all captive screws.
2. Squeeze the two (2) safety wire hinges or unclip the two (2) safety snells, whichever is being used.
3. Remove the reflector and ballast cover by turning the quarter-turn fasteners.
4. Remove the mounting hardware and place the luminaire into the grid opening.
5. Secure luminaire to "T" bar using furnished brackets and screws.
6. Make all necessary wiring connections.
7. Replace ballast cover, reflector, install lamp, safety wire hinges or safety snells and lens assembly.

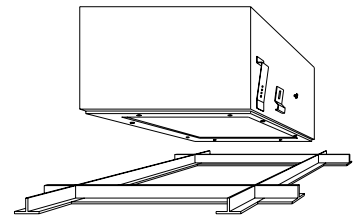

## RACQUETBALL

1. Assemble and Install provided plaster frame.
2. Remove lens frame assembly by loosening all captive screws.
3. Squeeze the two (2) safety wire hinges or unclip the two (2) safety snells, whichever is being used.
4. Remove the reflector and ballast cover by turning the quarter-turn fasteners.
5. Remove the tape securing the four (4) swing bars to the housing.
6. Place luminaire into ceiling opening and turn the four (4) swing bar screws clockwise until luminaire pulls flush to the ceiling. *NOTE: If there isn't plenum access it will be necessary to connect wiring before completely installing luminaire.*
7. Make all necessary wiring connections.
8. Replace ballast cover, reflector, install lamp, safety wire hinges or safety snells and lens assembly.

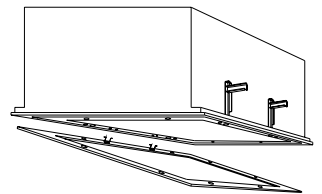

**Cardboard lampholder guard must be removed prior to lamping.**

**Cleaning Instructions:** Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the directions of the polish lines.

**Note:** All luminaires to be installed by a qualified electrician.  
Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.